


SK NÁVOD NA MONTÁŽ
 CZ MONTÁŽNÍ NÁVOD
 HU SZERELÉSI UTASÍTÁS
 DE MONTAGEANLEITUNG


GAUDI

	1100	mm
	550	
	600	

	60 min		PZ2		3m	600 mm

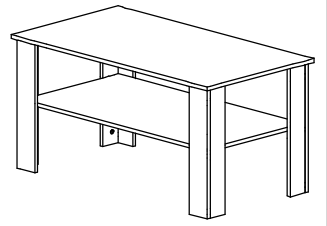


10836	②	1100*600*16	1x	1/1
07816	③	534*100*16	2x	1/1
07817	④	534*84*16	2x	1/1
07818	⑤	534*100*16	2x	1/1
07819	⑥	534*84*16	2x	1/1
10837	⑦	1034*534*16	1x	1/1

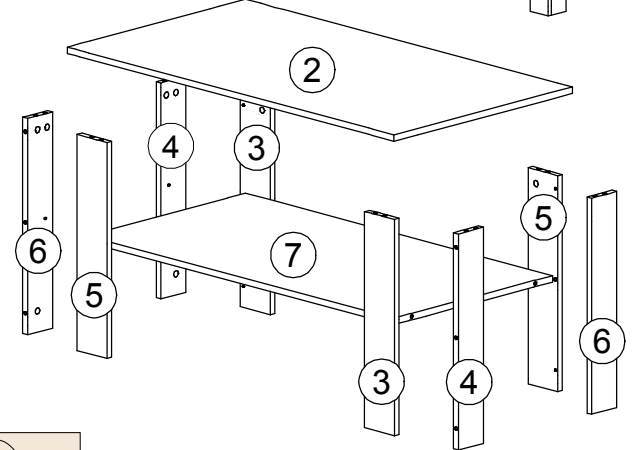



30090,00		27000,00		70013,01		70021,01	
A	4x	B	1x	C	12x	D	20x
						E	20x
						F	20x






✓	✗	✓	✗	✓	✗	✓	✗	✗	✗



A	4x	C	12x
		D	16x
		E	12x

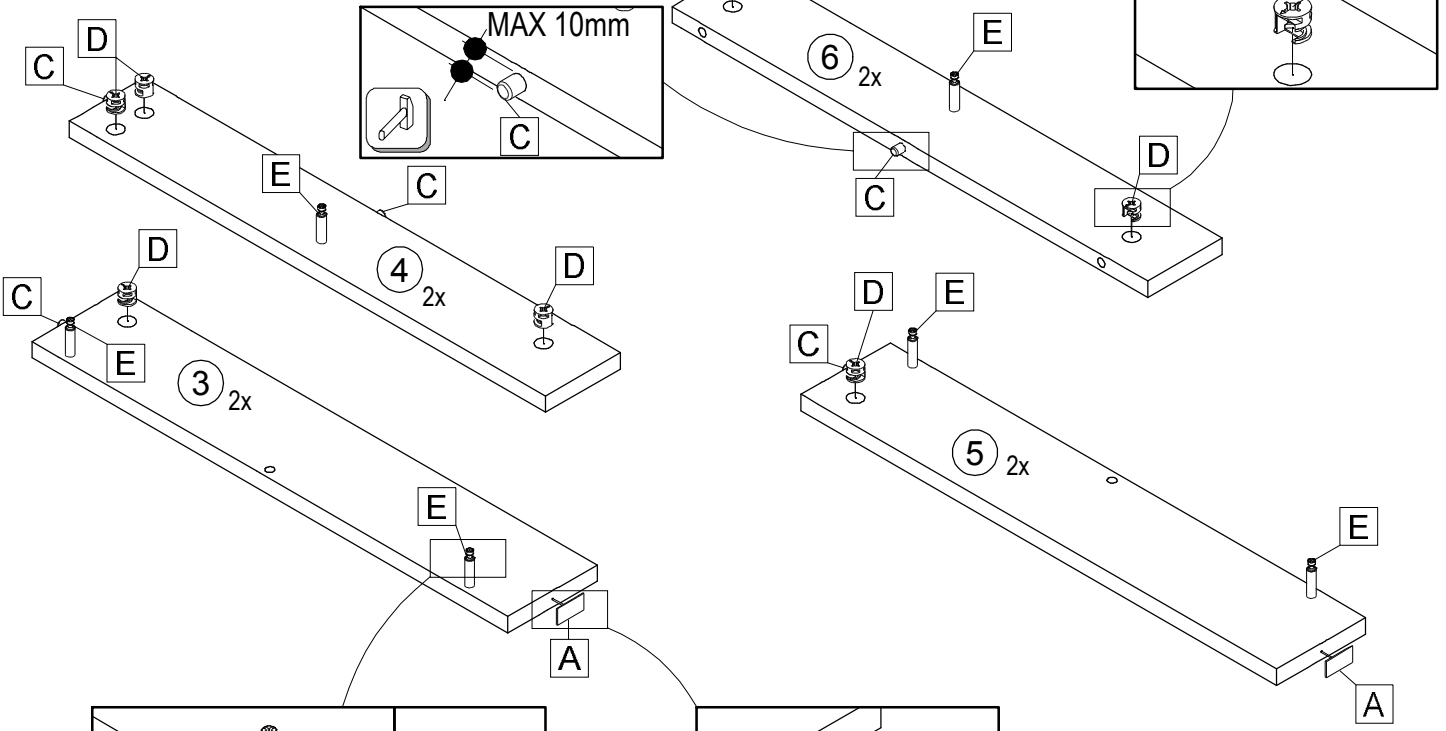

--	--	--	--	--	--



	D 4x		E 8x
---	------	---	------

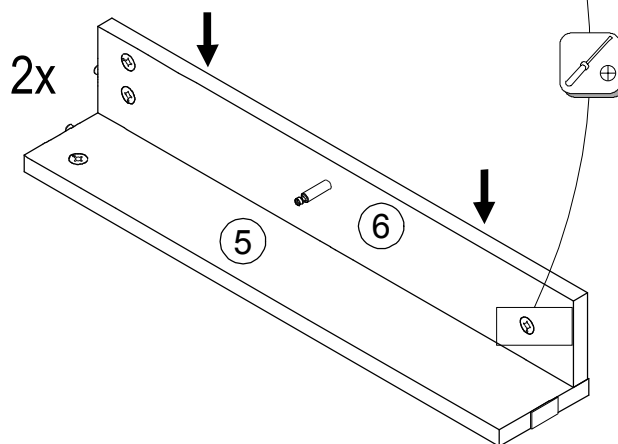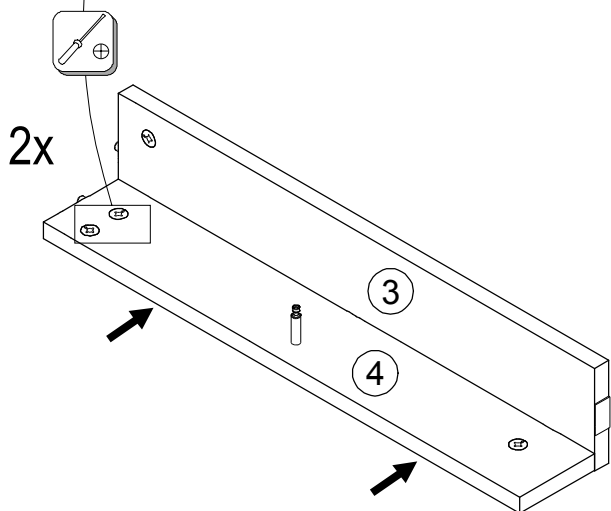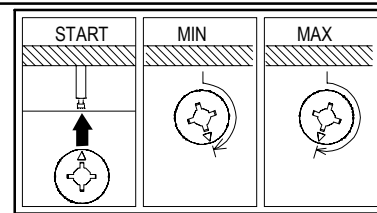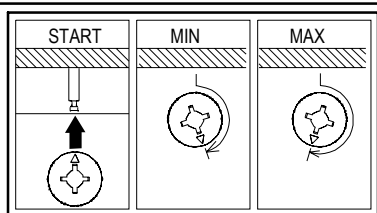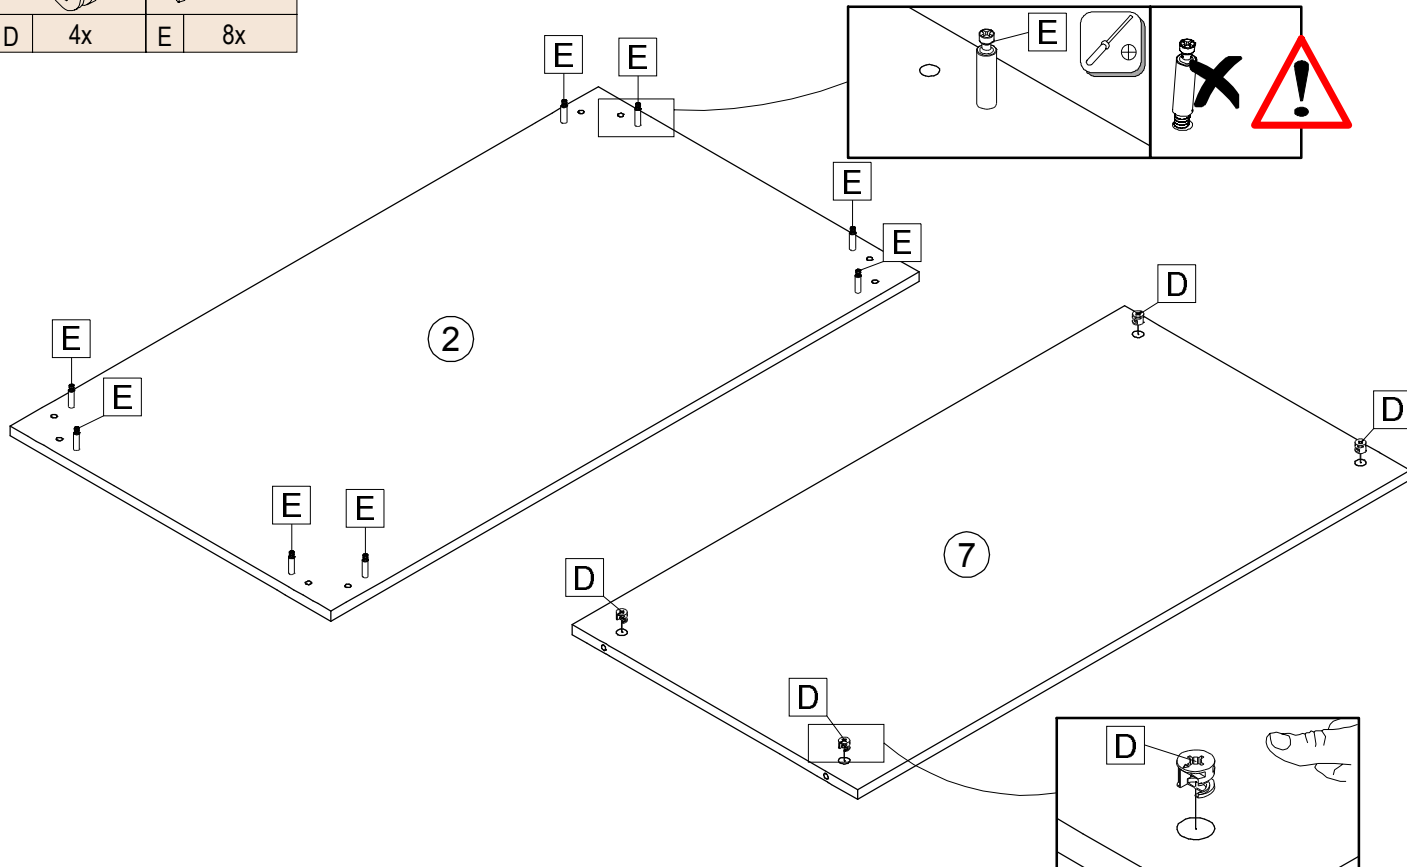

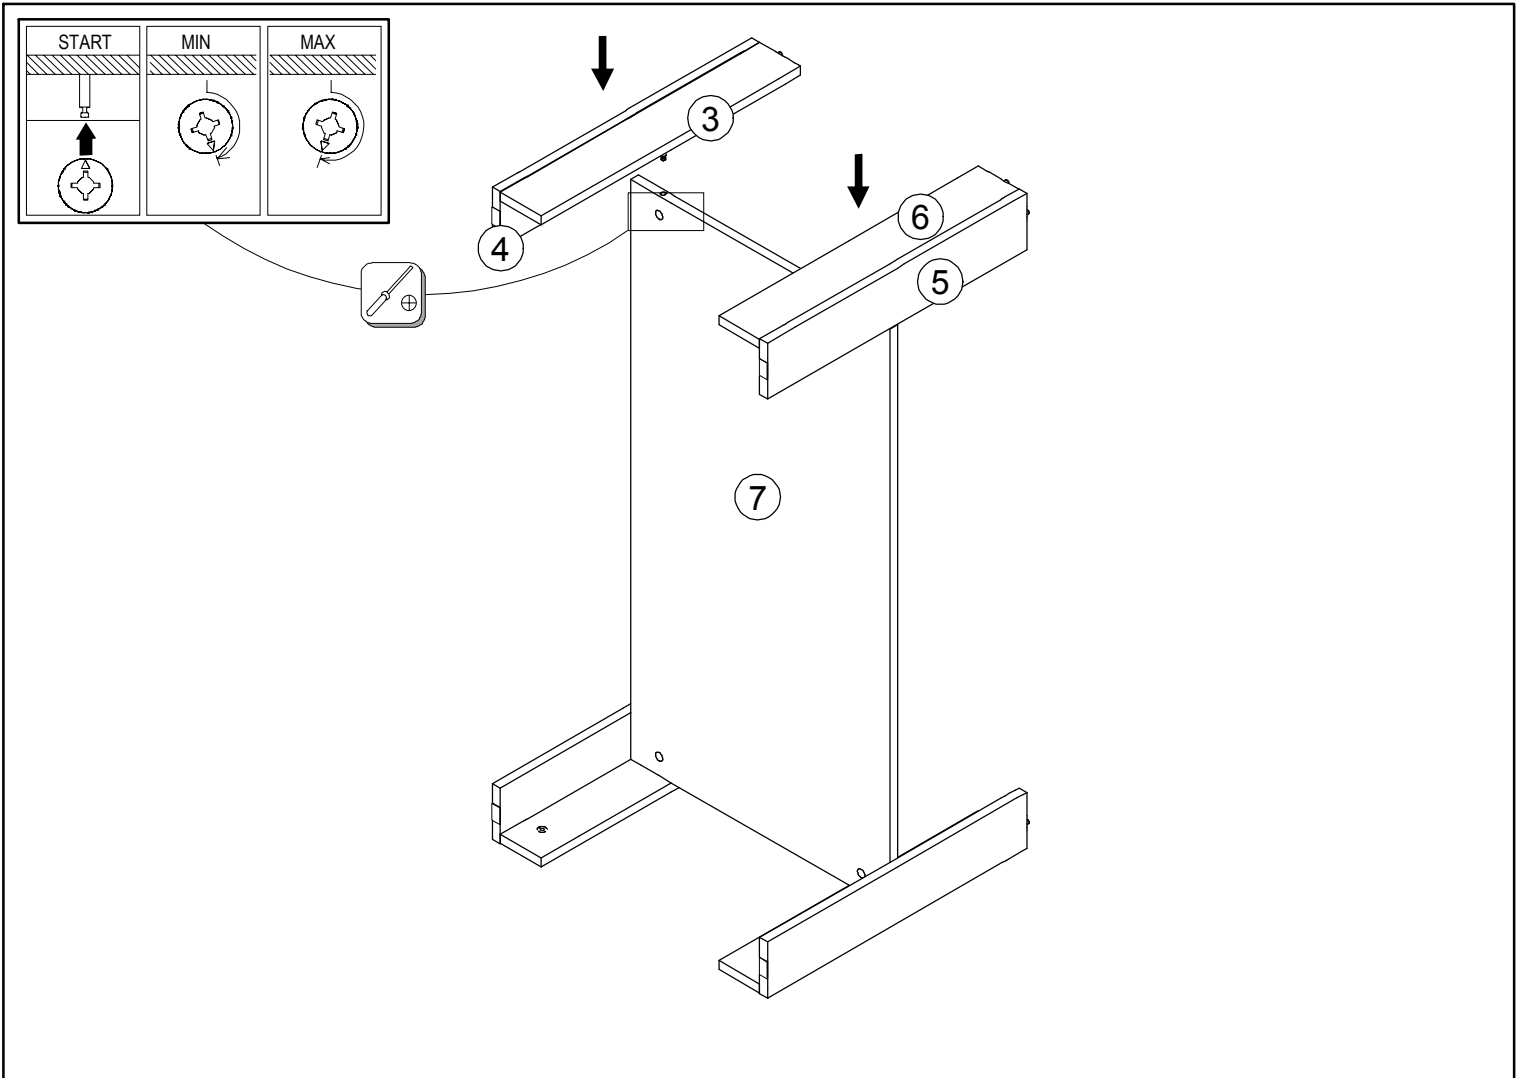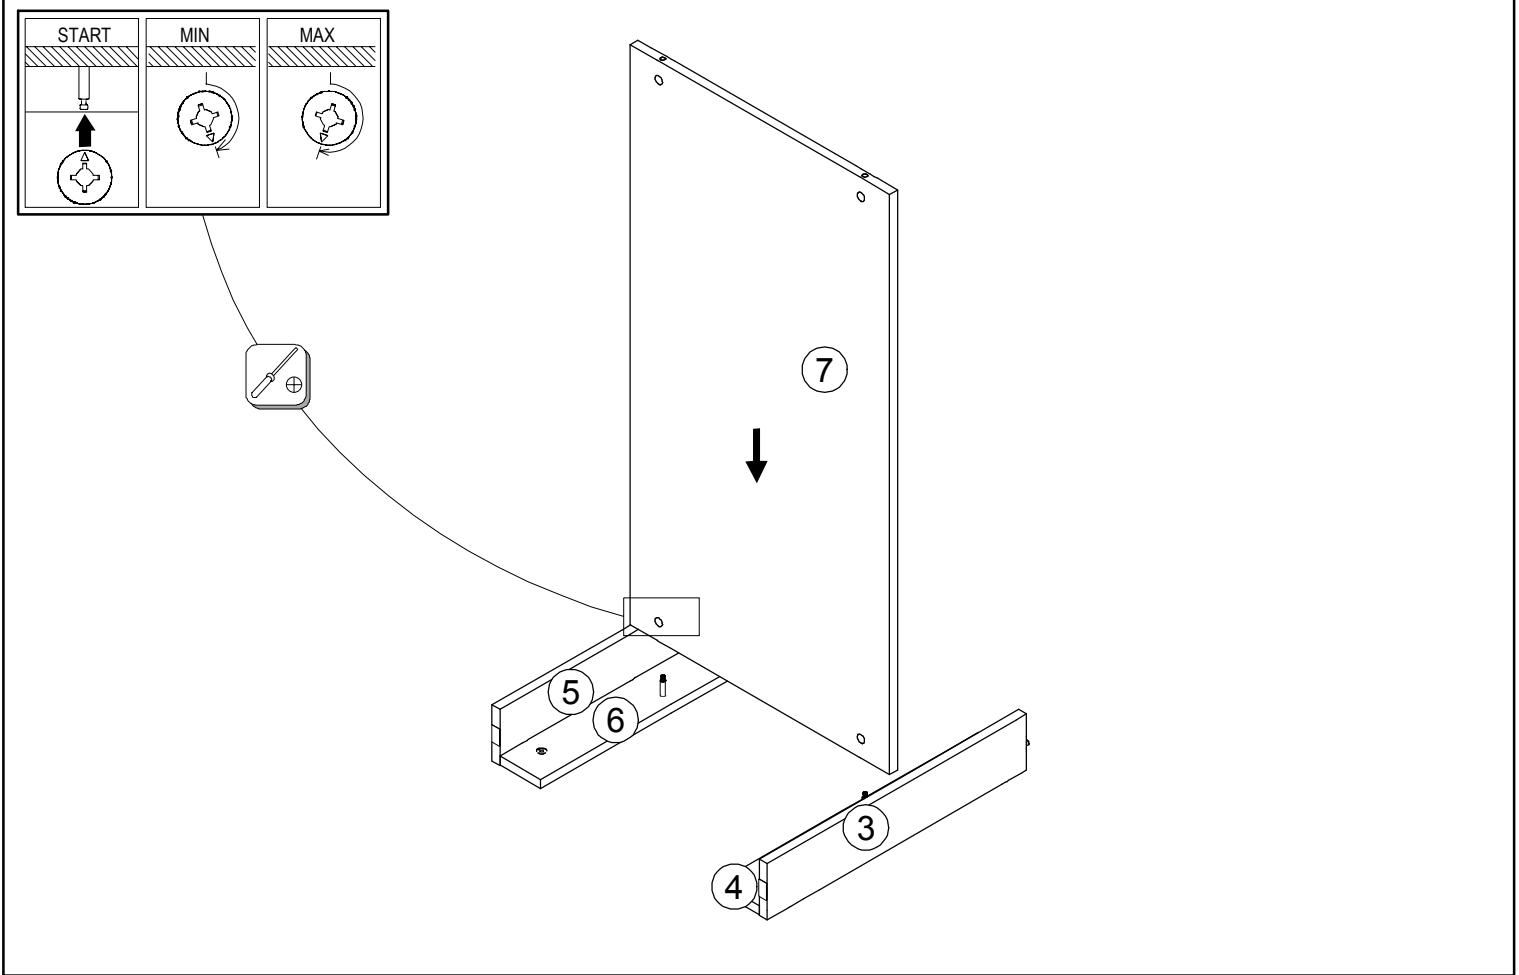

F	20x

START	MIN	MAX

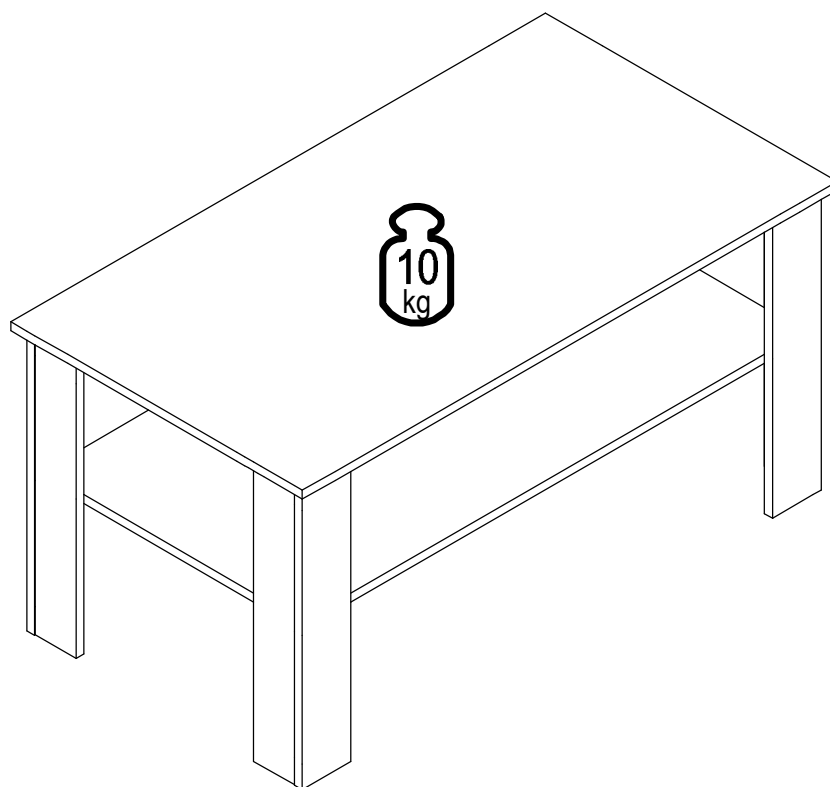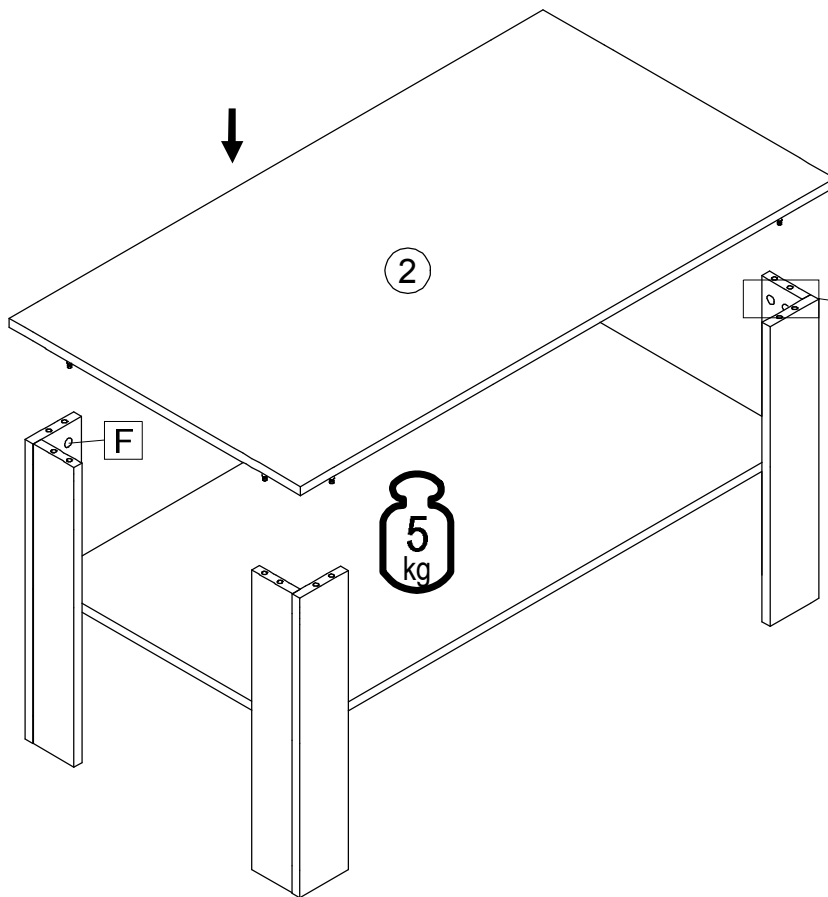

X	X	X	✓	X	✓	X	✓