


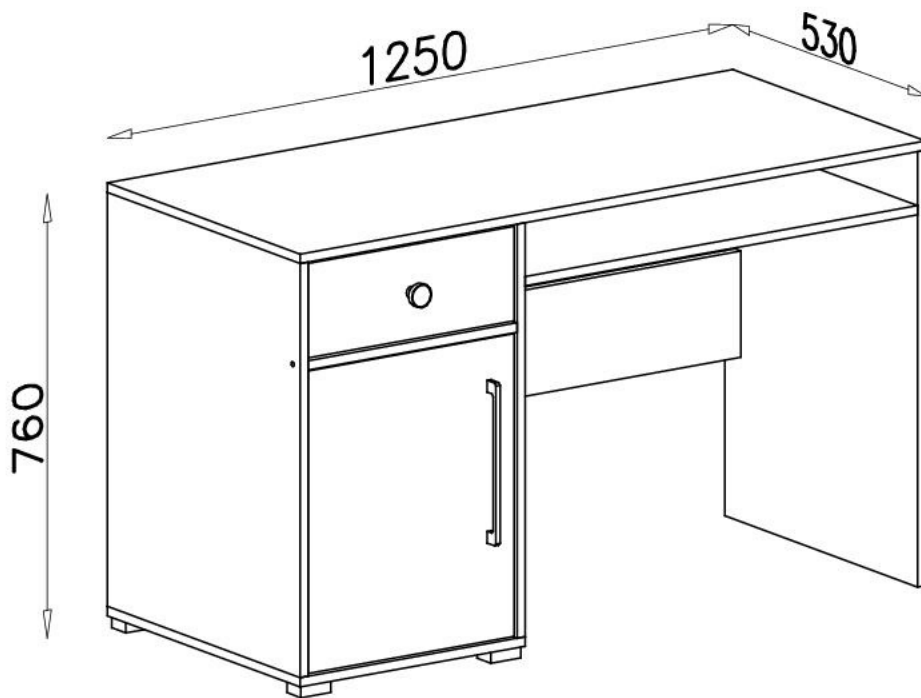




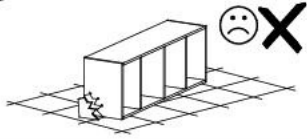



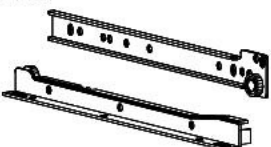






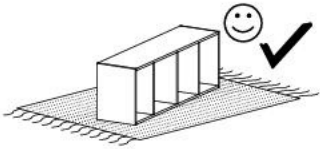





# Psací stůl Barney






		<b>P3</b>  x2	<b>E7</b>  x1	<b>E8</b>  x1
<b>G12</b>  3,5x25 x8	<b>W1</b>  x2	<b>N13</b>  M4x22 x3	<b>D4</b>  PZ350D x2	<b>H8</b>  400mm x1
<b>P2</b>  x4	<b>G4</b>  4x16 x10	<b>G2</b>  3x20 x20	<b>C4</b>  Z350D x2	
<b>A1</b>  ø7x50 x12	<b>B7</b>  ø8x30 x35	<b>W2</b>  x1	<b>F1</b>  x4	<b>G10</b>  6x13 x4


I

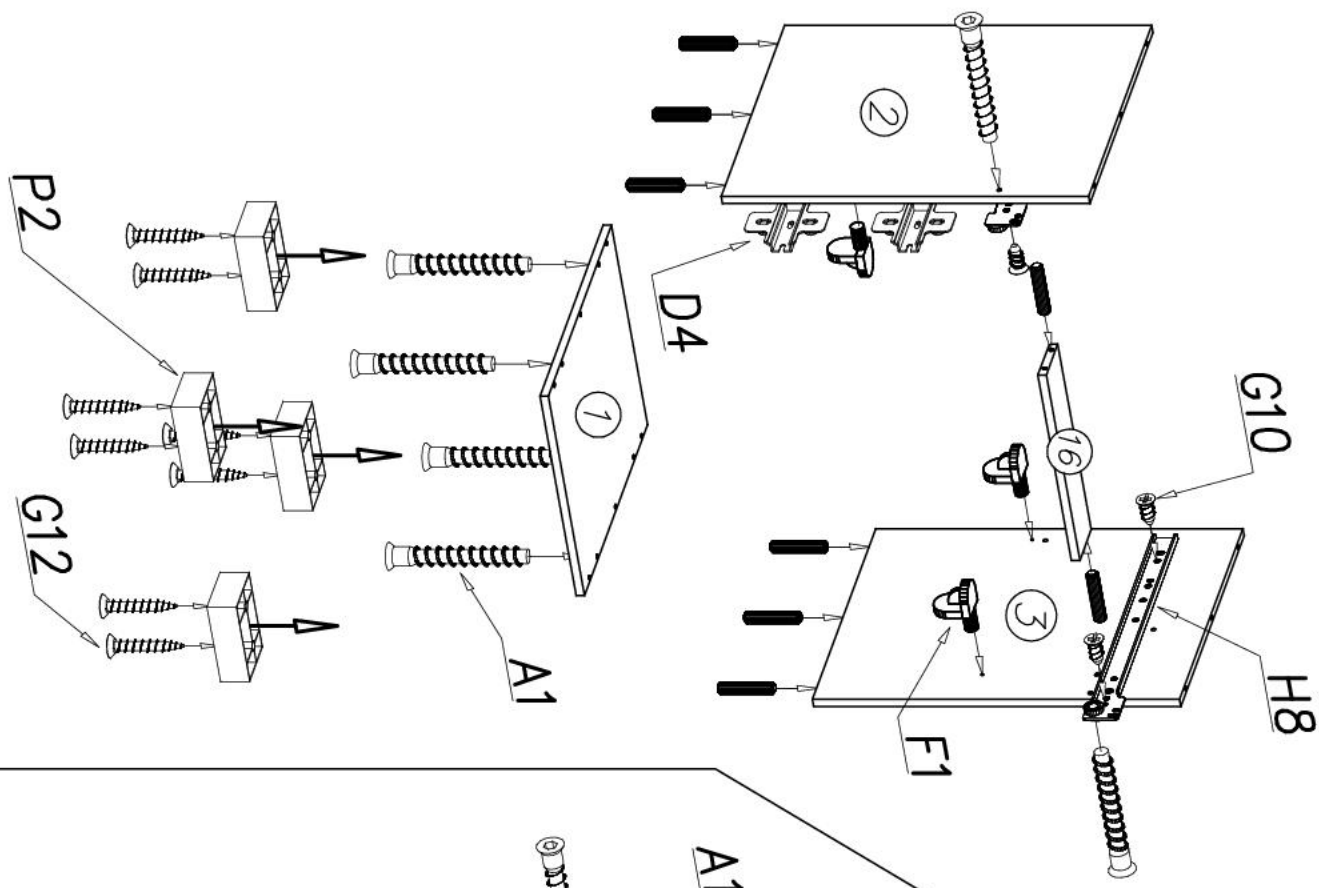

II

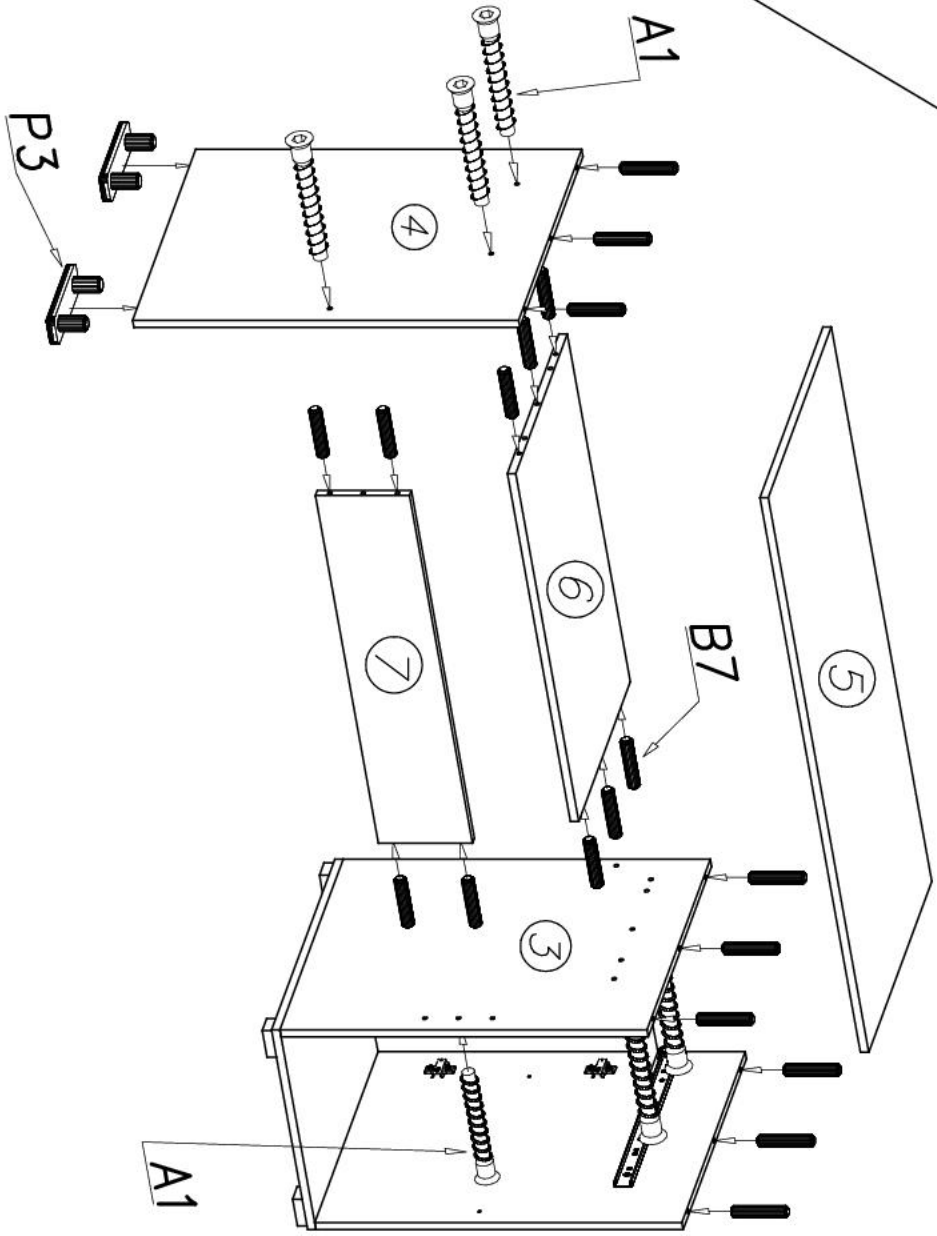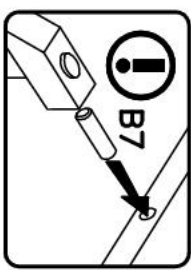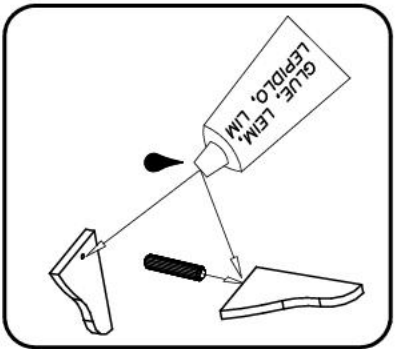

III

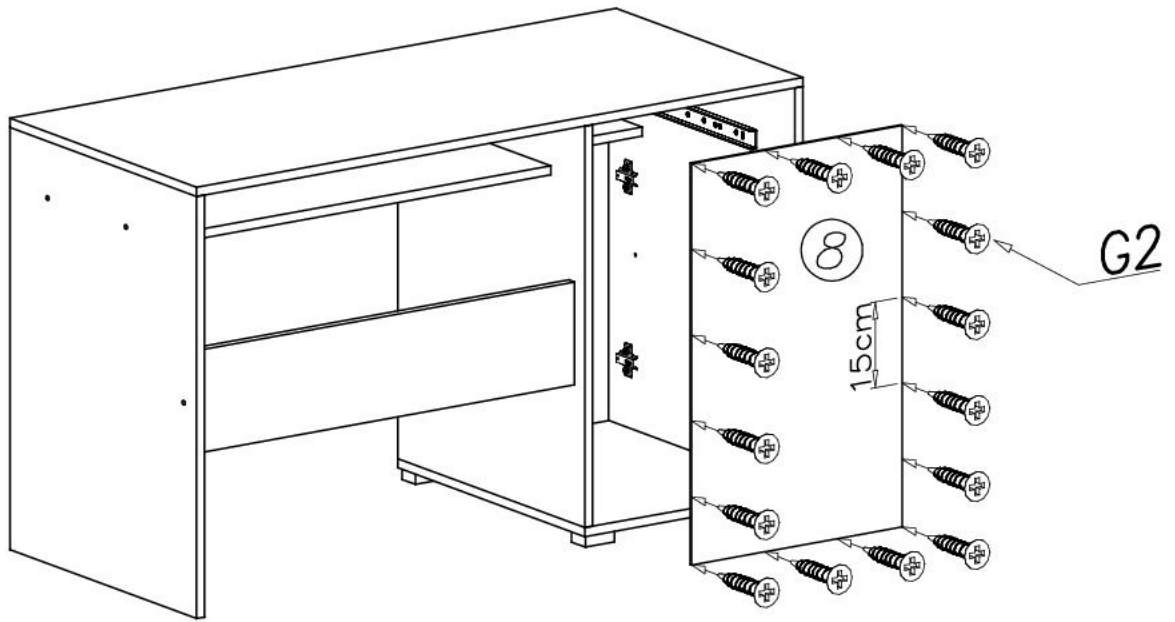

IV

