


Patrová postel 90x190 ANDY

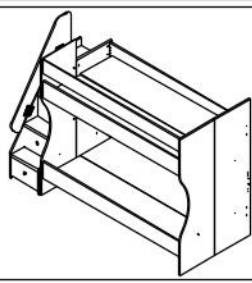


ACCESSORIE NO : 358
MANNESMAN 1915



1 ADET


<p>ACCESSORIE NO : 002 TITUS MINIFIX GÖVDE</p> <p>66 ADET</p>	<p>ACCESSORIE NO : 041 MINIFIX ARA MİL(68mm)</p> <p>6 ADET</p>	<p>ACCESSORIE NO : 001 MINIFIX MİL 6 MM</p> <p>26 ADET</p>	<p>ACCESSORIE NO : 317 10'LUK MINIFIX MİL</p> <p>28 ADET</p>	<p>ACCESSORIE NO : 120 6.3*13 MM EURO VİDA</p> <p>16 ADET</p>
<p>ACCESSORIE NO : 031 KARYOLA MENTEŞE</p> <p>8 ADET</p>	<p>ACCESSORIE NO : 114 M6*15 YSB VİDA</p> <p>62 ADET</p>	<p>ACCESSORIE NO : 032 MANNESMAN 910</p> <p>6 ADET</p>	<p>ACCESSORIE NO : 107 M6*35 VİDA</p> <p>2 ADET</p>	<p>ACCESSORIE NO : 440 YAPIŞKANLI TAPA</p> <p>19 ADET</p>
<p>ACCESSORIE NO : 004 ø8x30 KAVELA</p> <p>46 ADET</p>	<p>ACCESSORIE NO : 657 KORKULUK DESTEK</p> <p>1 ADET</p>	<p>ACCESSORIE NO : 113 3.5*18 MM S. VİDASI</p> <p>52 ADET</p>	<p>ACCESSORIE NO : 077 ø8x30 KAVELA KİLİTLİ</p> <p>8 ADET</p>	<p>ACCESSORIE NO : 035 400 MM RAY TAKIM</p> <p>4 TAKIM</p>
<p>ACCESSORIE NO : 014 30 LUK MONTEBET</p> <p>3 ADET</p>	<p>ACCESSORIE NO : 034 KORKULUK H PROFİLİ</p> <p>2 ADET</p>	<p>ACCESSORIE NO : 020 MINIFIX TAPA BEYAZ</p> <p>22 ADET</p>	<p>ACCESSORIE NO : 109 M6*45 VİDA</p> <p>2 ADET</p>	<p>ACCESSORIE NO : 131 4mm ALYAN ANAHTAR</p> <p>1 ADET</p>
			<p>ACCESSORIE NO : 510 ø15 METAL SİLİNDİRİK SOMUN</p> <p>2 ADET</p>	<p>ACCESSORIE NO : 125 M6*60 ALYAN VİDA</p> <p>2 ADET</p>

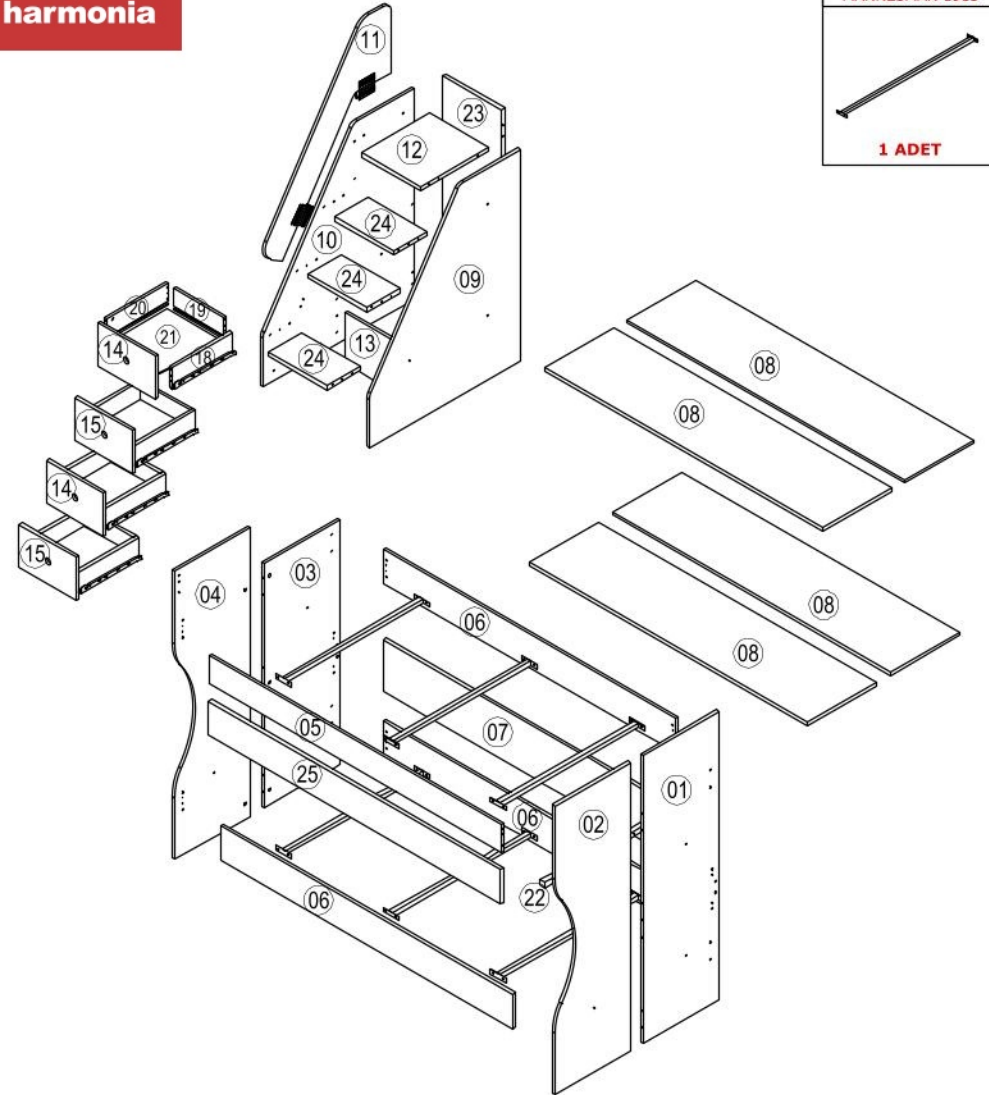


NO	ADET/PCS	ÖLÇÜ/DIMENSIONS	NO	ADET/PCS	ÖLÇÜ/DIMENSIONS	NO	ADET/PCS	ÖLÇÜ/DIMENSIONS
01	1	1640 X 495	11	1	1315 X 377	23	1	1084 X 386
02	1	1640 X 495	12	1	450 X 386	24	3	386 X 220
03	1	1386 X 495	13	1	386 X 290	25	1	1914 X 196
04	1	1640 X 495	14	2	378 X 243			
05	1	1914 X 160	15	2	378 X 243			
06	3	1914 X 196	18	4	400 X 120			
07	1	1914 X 296	19	4	326 X 120			
08	4	1810 X 452	20	4	400 X 120			
09	1	1199 X 989	21	4	388 X 336			
10	1	1199 X 989	22	1	685 X 30			


PLEASE ORDER THE ACCESSORIES ACCORDING TO THE REFERENCE NUMBER ON THE DRAWING(EXAMPLE ACCESSORIE NO-008 RAFIX MİL 1.PCS.)

PLEASE ORDER THE SPARE PARTS ACCORDING TO THE REFERENCE NUMBER ON THE DRAWING

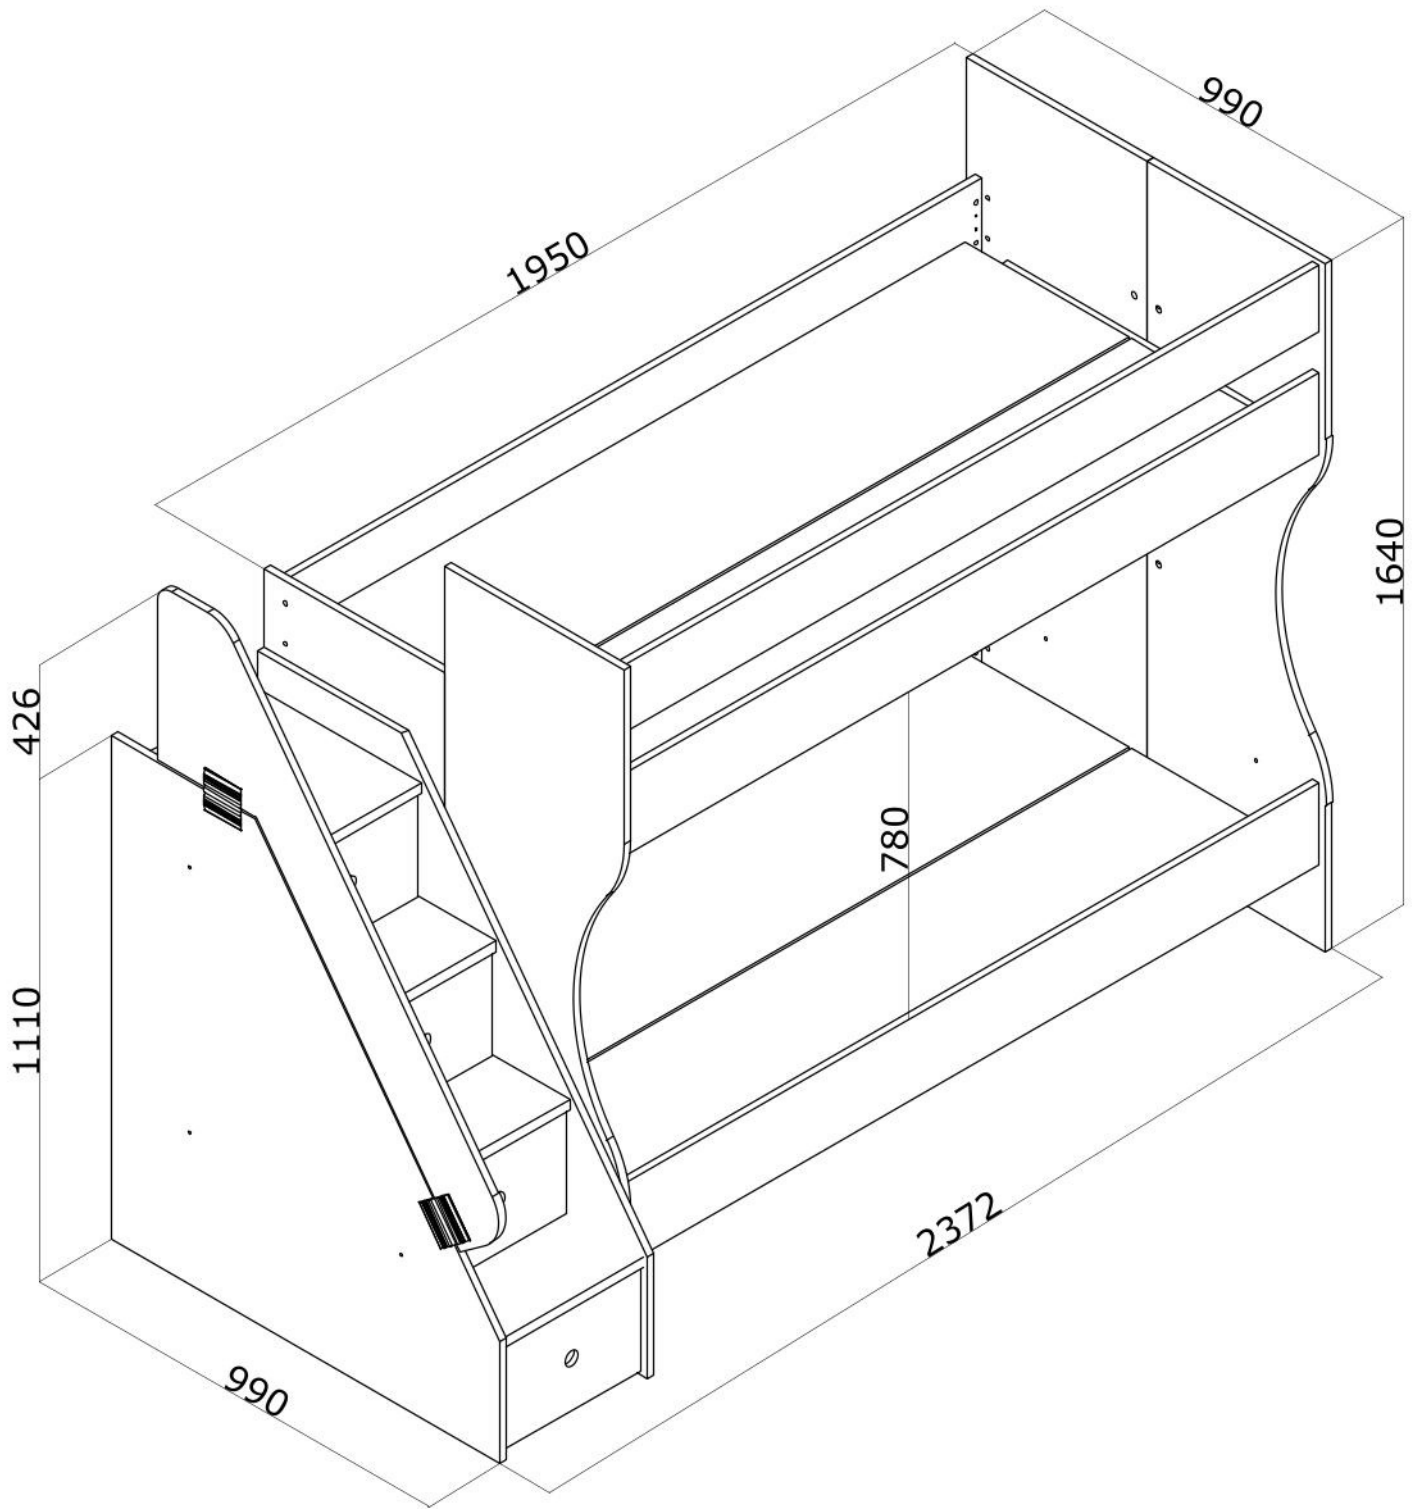


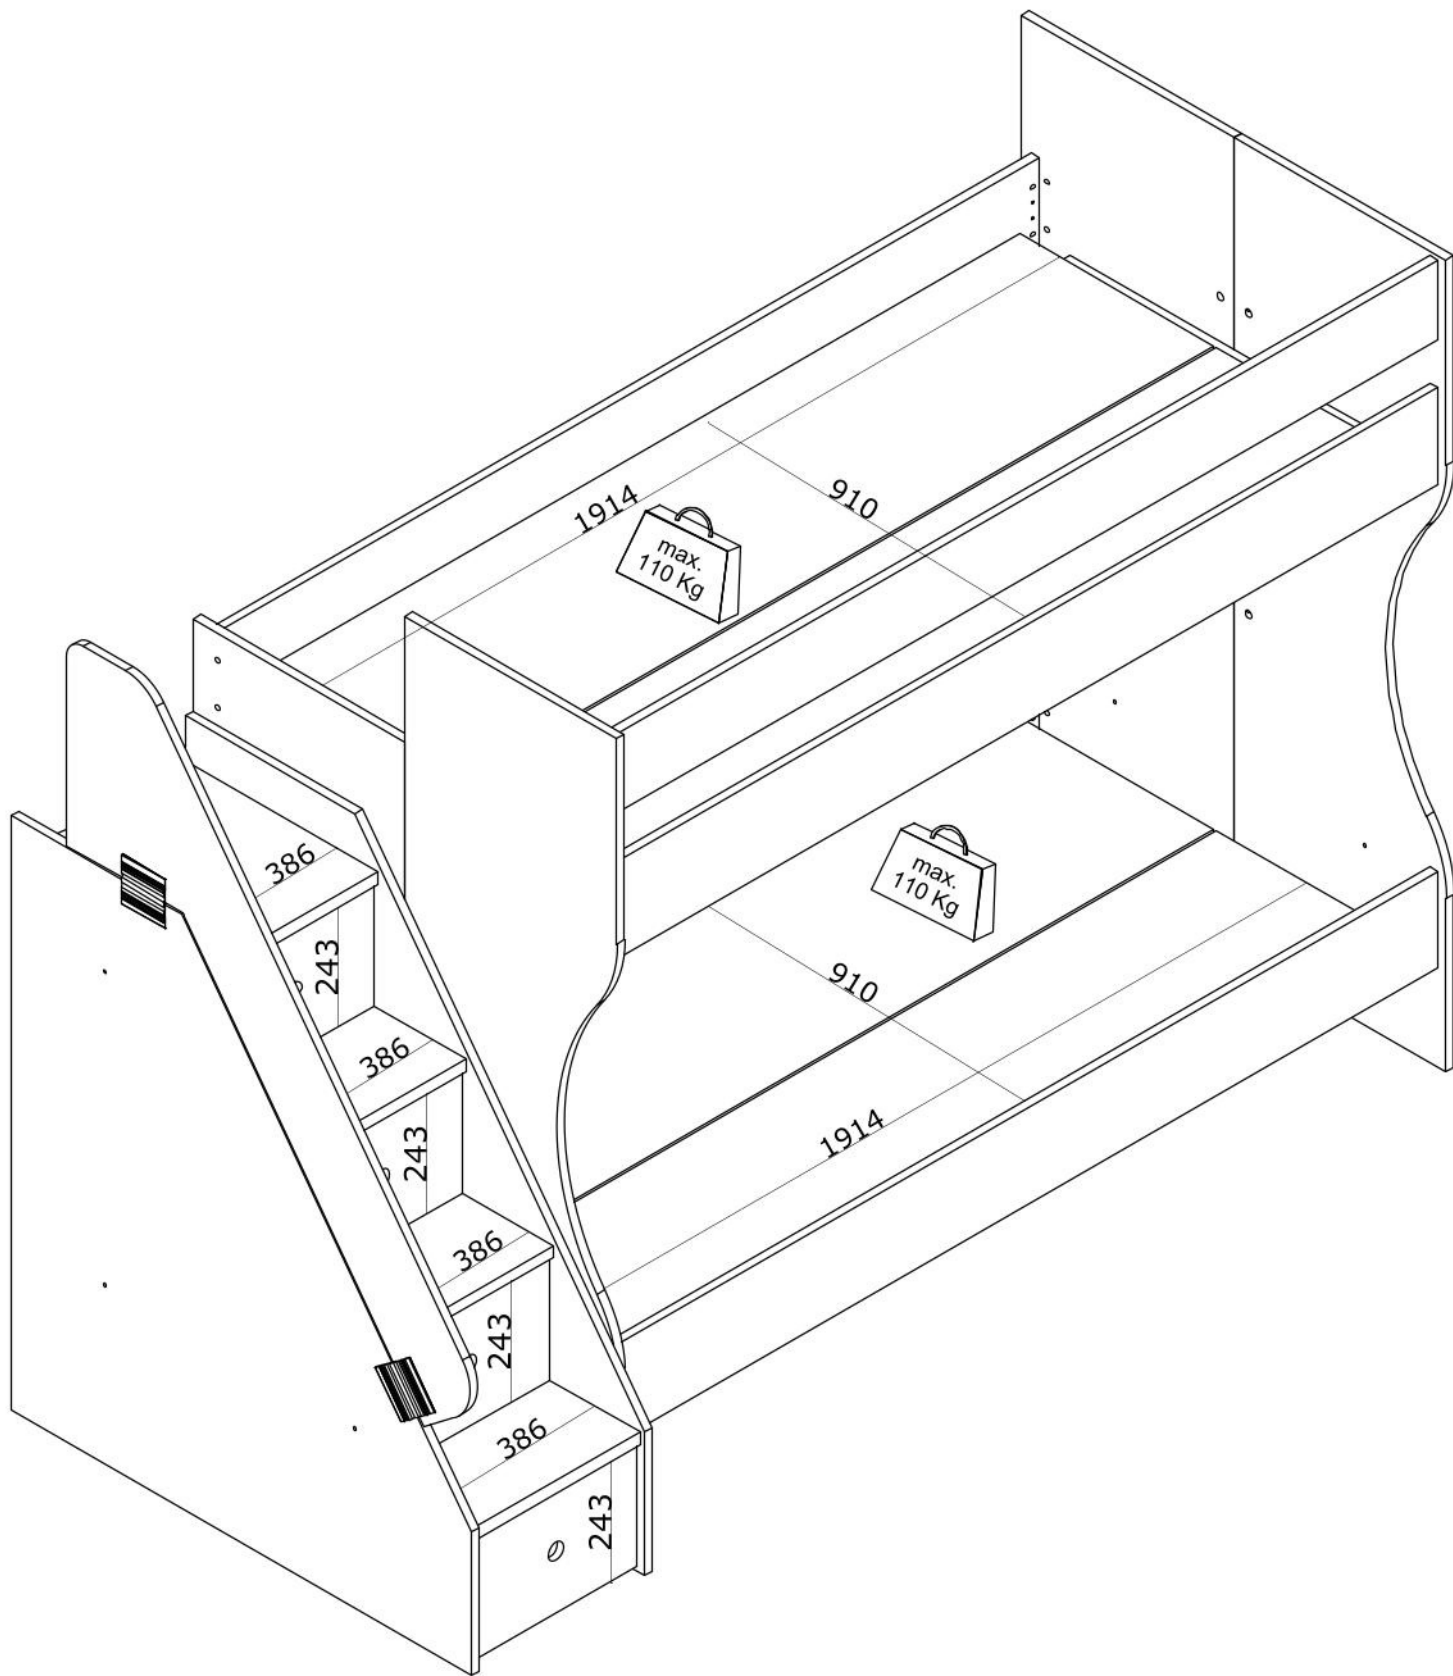


INSTALLATION STEPS

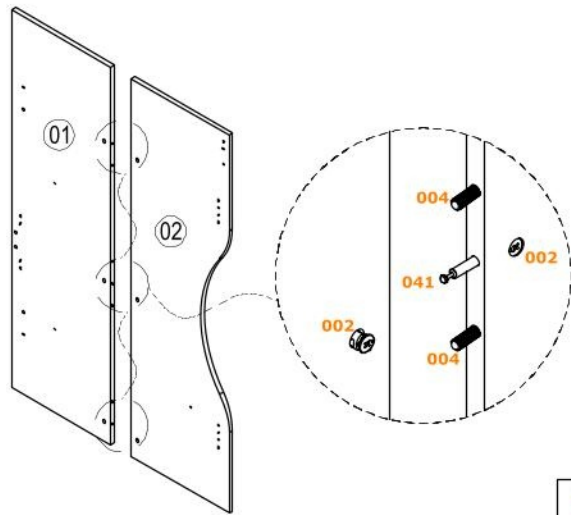


1

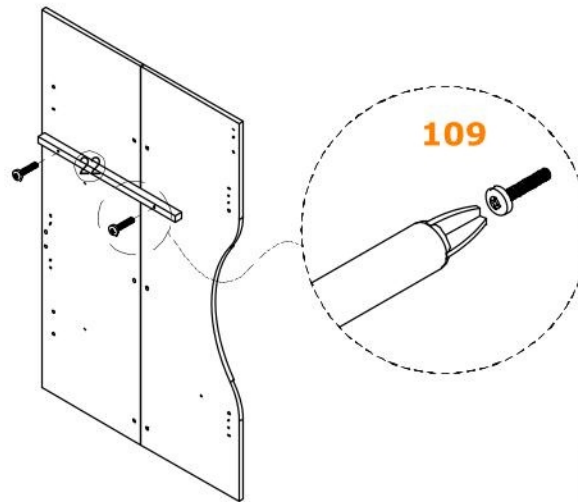


2

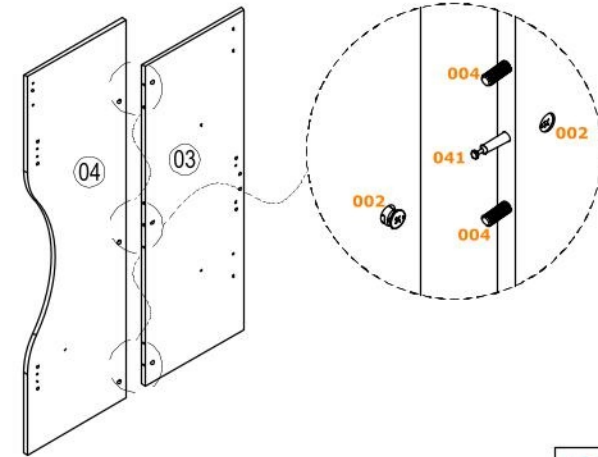


3

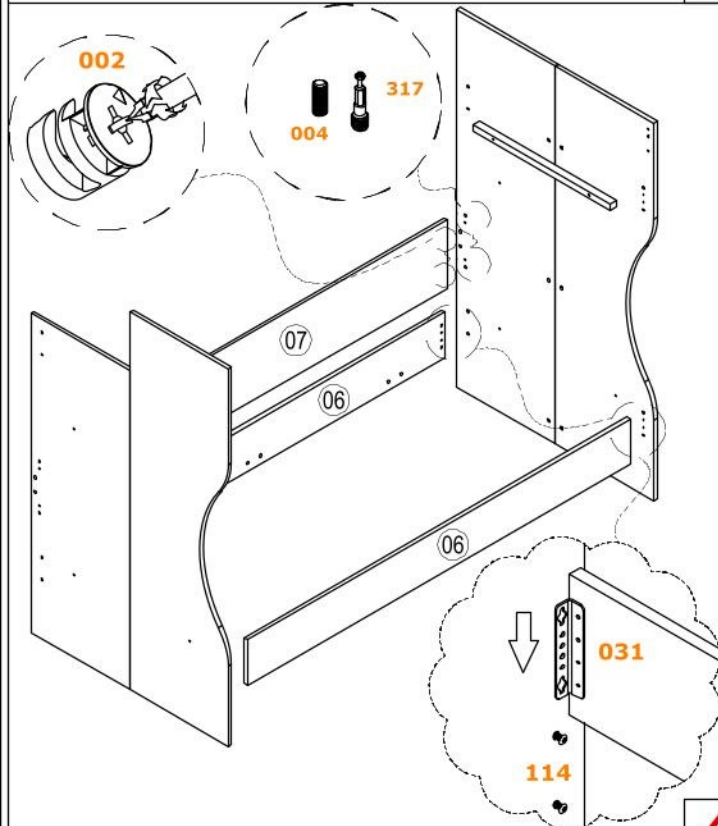

4

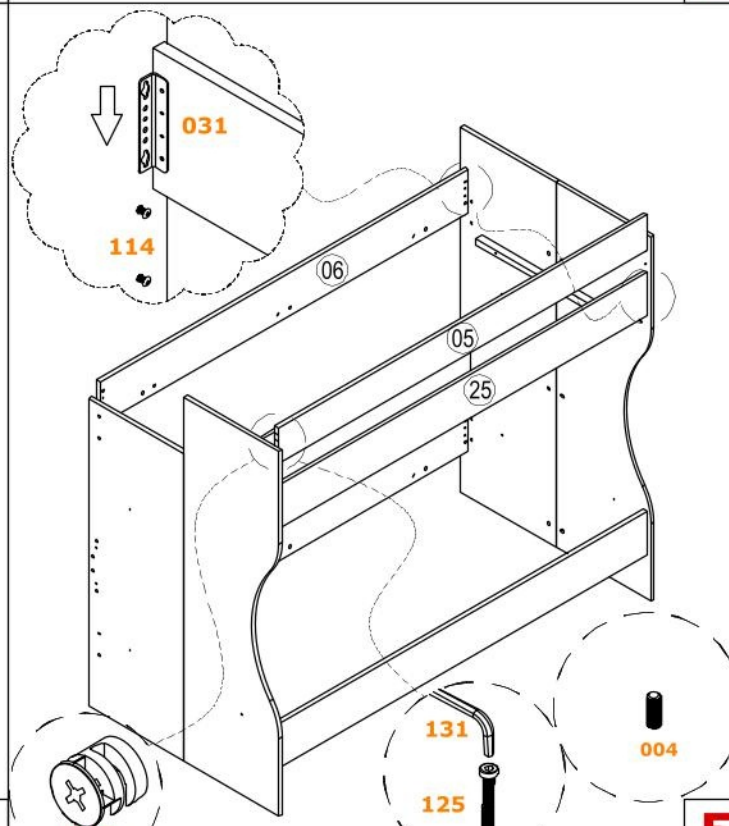


5

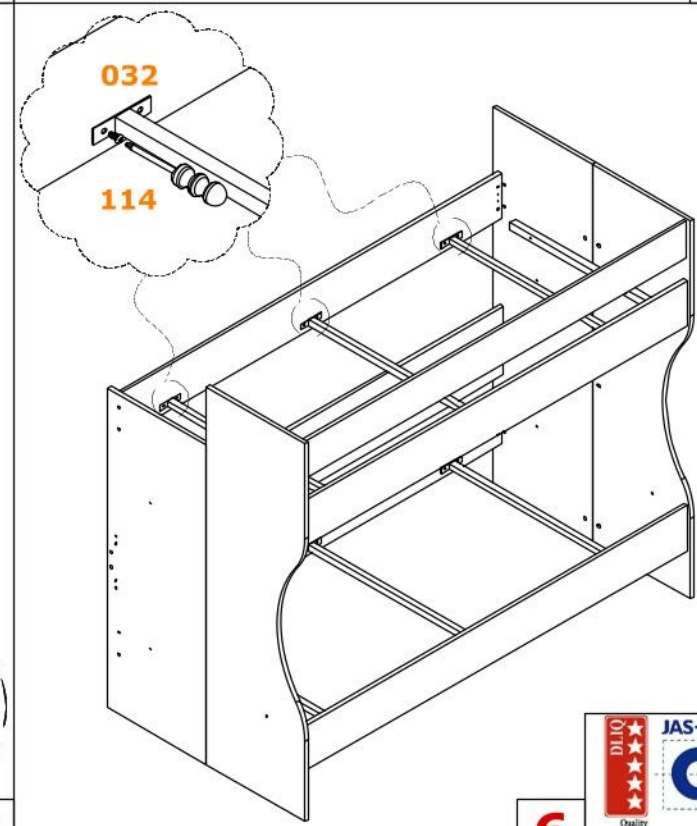


6


INSTALLATION STEPS

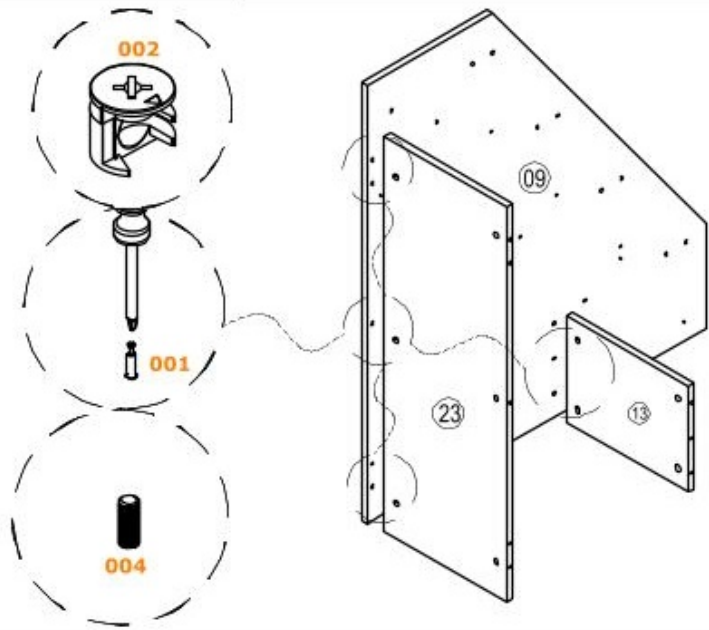


7

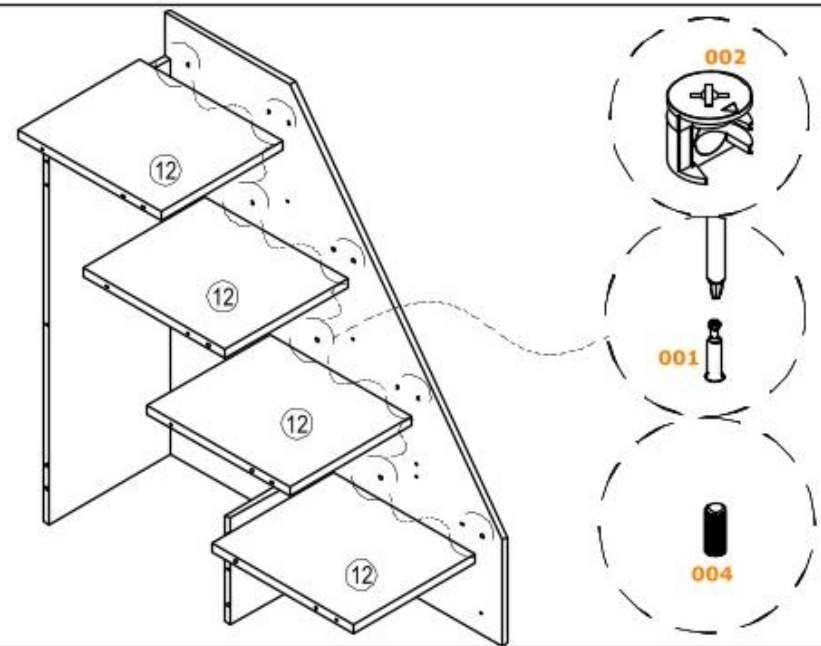

8

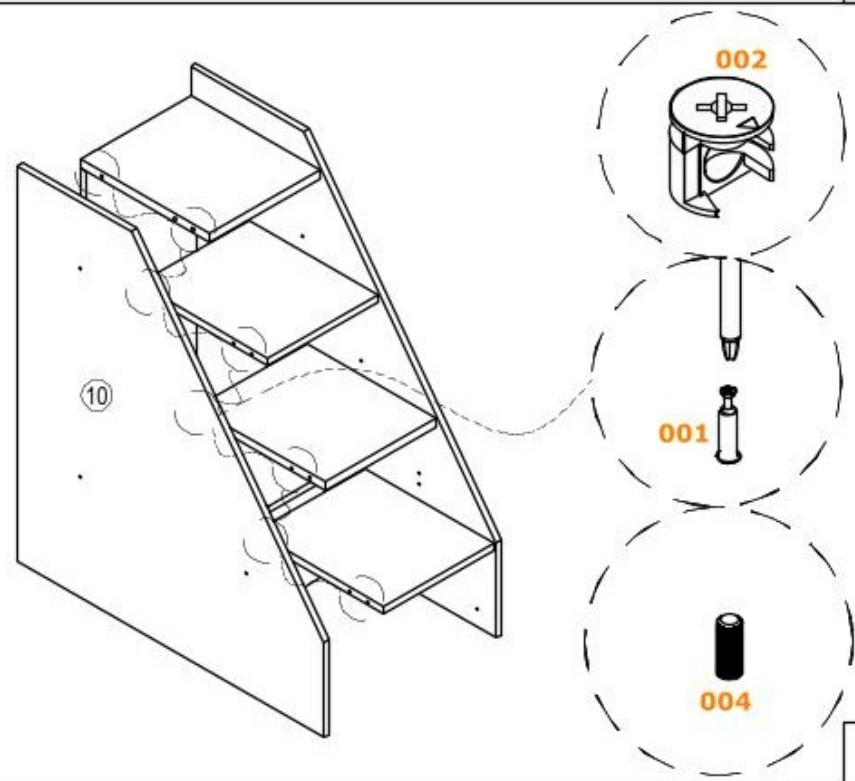





9

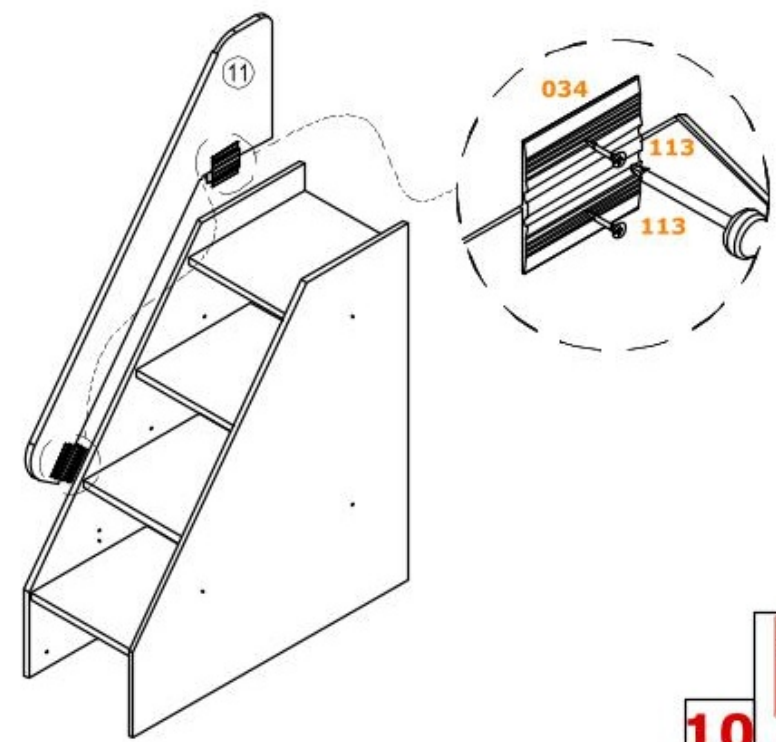


10

INSTALLATION STEPS

11

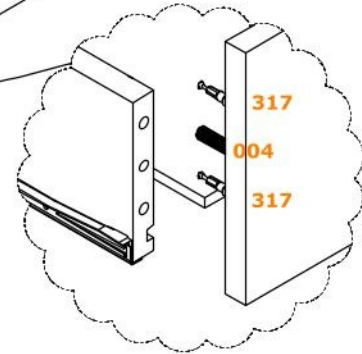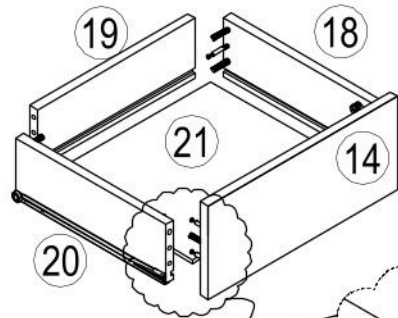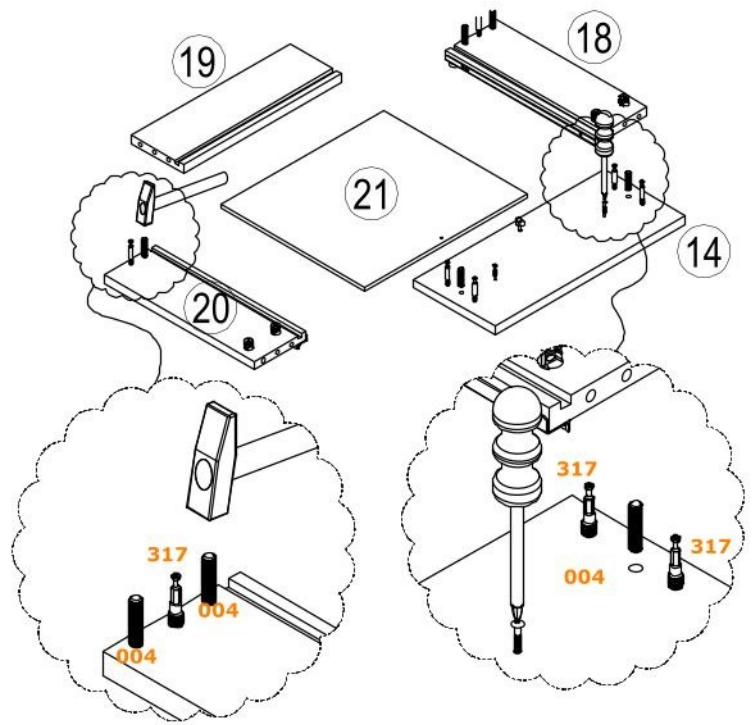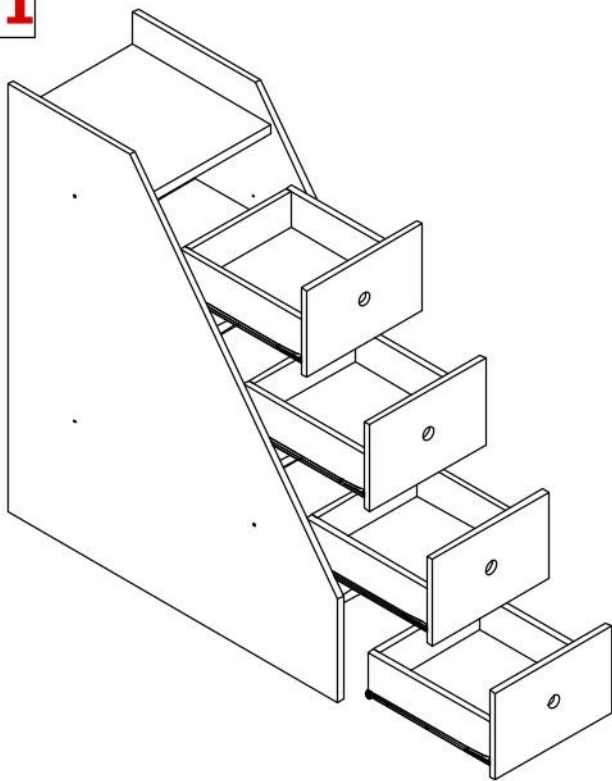

12

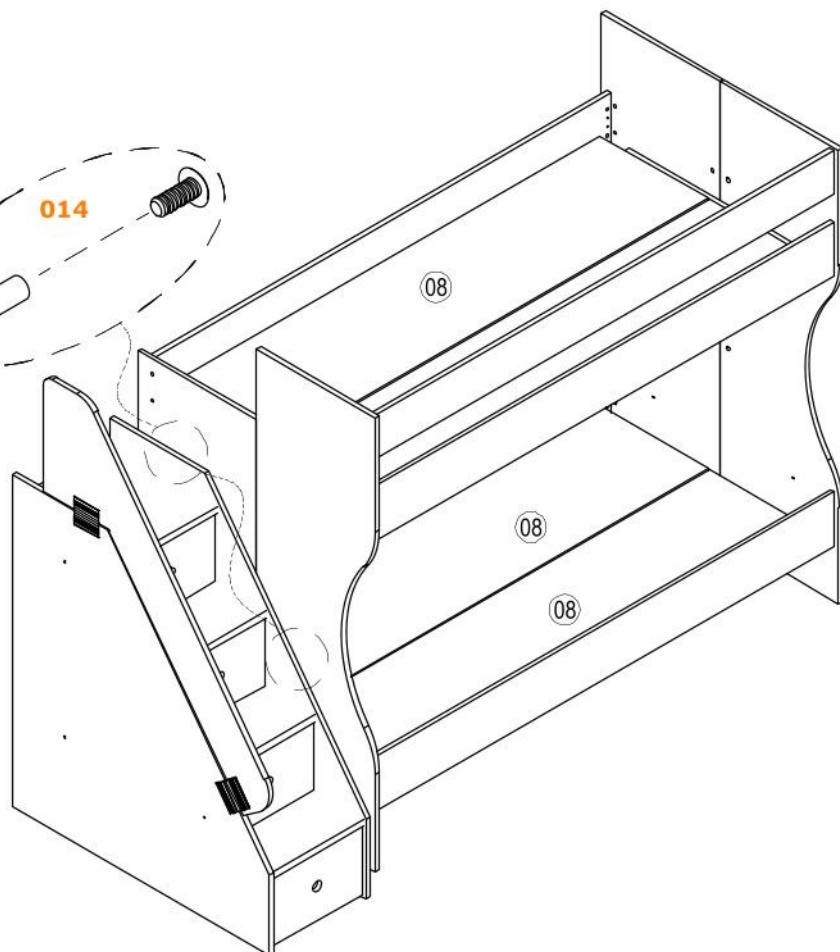

014

08

08

08